

View Online at <https://aerobasegroup.com/nsn/1090-01-068-8718>

**End Application:**

1290-01-240-6382 rkt mgmt sub

**General Description:**

Ground lug must be positioned between inside edge of cover (.440 dim) and end of display bracket (.775 dim) during tightening of connector receptacle for clearance of cover and display bracket

**Shelf Life:**

N/a

**Unit Of Measure:**

--

**Demilitarization:**

No