

View Online at <https://aerobasegroup.com/nsn/1730-01-314-1097>

General Description:

Fthe jig assembly is used during overhaul of the forward transmission to install/remove the upper cover and the bearings on/from the helicopter rotor shaft; furnished with 4 casters and 2 floor locks

Shelf Life:

N/a

Unit Of Measure:

--

Demilitarization:

Yes - demil/mli