

View Online at <https://aerobasegroup.com/nsn/3510-00-892-6125>

Speed Adjustments:

Multiple

Current Type:

Ac

Prime Mover Type:

Electric motor

Err Default:

Err default or err default

Loading Location:

Side or top

Extraction Method:

Centrifugal

Err Default:

Err default

Drain Type:

Pump

Operating Control Type:

Automatic

Voltage In Volts:

220.000

Phase:

Single

Frequency In Hertz:

50.000

Specification Or Standard:

1 type and 3 class and b style

Departure From Cited Document:

As modified by voltage in volts, frequency in hertz

Shelf Life:

N/a

Unit Of Measure:

--

Demilitarization:

No

Fig:

T155-c