

View Online at <https://aerobasegroup.com/nsn/4920-01-076-2574>

**End Application:**

Aau34/a, aau37/a altimeters

**General Description:**

Used to check the plate, wiring assembly for correct operation and interconnection of the electrical components, and to provide a manually adjustable input to the altimeter synchro either when installed in the plate and gear assembly only, or installed in an uncased unit

**Shelf Life:**

N/a

**Unit Of Measure:**

--

**Demilitarization:**

No