

View Online at <https://aerobasegroup.com/nsn/4920-01-076-2574>

End Application:

Aau34/a, aau37/a altimeters

General Description:

Used to check the plate, wiring assembly for correct operation and interconnection of the electrical components, and to provide a manually adjustable input to the altimeter synchro either when installed in the plate and gear assembly only, or installed in an uncased unit

Shelf Life:

N/a

Unit Of Measure:

--

Demilitarization:

No