

View Online at <https://aerobasegroup.com/nsn/5120-01-187-5717>

**Special Features:**

Used during depot level maintenance of the air vehicle engine to remove the spinner; it is installed with the puller fingers engaged in the 3 holes in the spinner housing; the threaded shaft is turned down onto the I.P. Shaft and the spinner is drawn off the shaft

**Shelf Life:**

N/a

**Unit Of Measure:**

--

**Demilitarization:**

No

**Fiig:**

T294-m