

View Online at <https://aerobasegroup.com/nsn/5120-01-455-8471>

**General Description:**

The core tool is used to remove and reinstall the valve core; it is also used to ream valve seat and repair threads

**Shelf Life:**

N/a

**Unit Of Measure:**

--

**Demilitarization:**

No

**Fiig:**

A23900