

View Online at <https://aerobasegroup.com/nsn/5120-01-455-8471>

General Description:

The core tool is used to remove and reinstall the valve core; it is also used to ream valve seat and repair threads

Shelf Life:

N/a

Unit Of Measure:

--

Demilitarization:

No

Fiig:

A23900