

View Online at <https://aerobasegroup.com/nsn/5865-01-462-8142>

**General Description:**

Used to install the infrared lamp between the anode and the cathode vibration isolators; insures that the lamp is properly pre-loaded to the required parameters; consists of a machined spacer/collar with a hole through which the lamp's cathode heater wire is routed so it can be mounted on the lamp's cathode; secured to the lamp with a thumbscrew

**Shelf Life:**

N/a

**Unit Of Measure:**

--

**Demilitarization:**

No