

View Online at <https://aerobasegroup.com/nsn/5895-01-601-3307>

**Basic Shape Style:**

Rectangular or square

**Inclosure Type:**

Encased

**Operating Control Method:**

Automatic

**Control Type:**

Local

**Connection Type And Location:**

Terminal block w/screw top

**External Dc Operating Voltage In Volts:**

12.0 1st voltage

**Product Name:**

Two-channel rs-485/rs-422 to current loop converter

**Special Features:**

The rs-485/rs-422 driver is enabled automatically when data is received on the current loop side of the converter; driver is disabled 8.33 milliseconds, one character at 1200 baud, after data transmission is complete; current loop side of the converter has a female db-25s connector

**Shelf Life:**

N/a

**Unit Of Measure:**

--

**Demilitarization:**

Yes - demil/mli

**Fiig:**

A32200