

View Online at <https://aerobasegroup.com/nsn/6625-00-580-3781>

Reliability Indicator:

Not established

Indicator Type:

Dial w/pointer

Installation Design:

Panel

Measurement Range:

+0.0/+300.0 volts, ac single indicator single range

Fsc Application Data:

Test set, elect. Equip.

Shelf Life:

N/a

Unit Of Measure:

--

Demilitarization:

No

Fiig:

A310a0