

View Online at <https://aerobasegroup.com/nsn/6625-00-855-1526>

Indicator Type:

Dial w/pointer

Installation Design:

Rack

Functional Description:

Direct reading voltage measurements of total, fundamental, in phase, and quadrature components of an ac signal as well as phase angle to 1 deg; -c signal and reference isolation, rear connectors, and 10 mv full scale range

Supplementary Features:

Also known as four frequency phase angle voltmeter

Shelf Life:

N/a

Unit Of Measure:

--

Demilitarization:

No

Fiig:

A310a0