

View Online at <https://aerobasegroup.com/nsn/6625-01-373-6522>

General Description:

Used at the organizational level and depot to check and adjust crt display deflection; it is also used with a photometer to check luminance variation; the template is placed on the face of the crt to verify that rows and columns in a crosshatch test pattern intersect within marked locations and to accurately and consistently mark locations where brightness must be measured to verify screen intensity; this is used to support the radar control display unit of the rsip e-3 (awacs) radar system.

Shelf Life:

N/a

Unit Of Measure:

--

Demilitarization:

No

Fig:

A23900