

View Online at <https://aerobasegroup.com/nsn/6625-01-373-6522>

**General Description:**

Used at the organizational level and depot to check and adjust crt display deflection; it is also used with a photometer to check luminance variation; the template is placed on the face of the crt to verify that rows and columns in a crosshatch test pattern intersect within marked locations and to accurately and consistently mark locations where brightness must be measured to verify screen intensity; this is used to support the radar control display unit of the rsip e-3 (awacs) radar system.

**Shelf Life:**

N/a

**Unit Of Measure:**

--

**Demilitarization:**

No

**Fig:**

A23900