

View Online at <https://aerobasegroup.com/nsn/6625-01-384-1823>

Reliability Indicator:

Not established

Indicator Type:

Dial w/pointer

Installation Design:

Panel

Accuracy In Percent:

-2.0/+2.0 at full scale single indicator single range

Power Source:

External

Measurement Range:

+0.0/+200.0 amperes single indicator single range

Features Provided:

Zero adjuster

Phase:

Single

Fsc Application Data:

Test set, elect. Equip.

Shelf Life:

N/a

Unit Of Measure:

--

Demilitarization:

No

Fiig:

A310a0