

View Online at <https://aerobasegroup.com/nsn/6625-01-395-6052>

Reliability Indicator:

Not established

Indicator Type:

Dial w/pointer

Installation Design:

Panel

Power Source:

External

Measurement Range:

+4.0/+20.0 milliamperes, dc single indicator single range

Phase:

Single

Fsc Application Data:

Test set, elect. Equip.

Shelf Life:

N/a

Unit Of Measure:

--

Demilitarization:

Yes - demil/mli

Fiig:

A310a0