

View Online at <https://aerobasegroup.com/nsn/6625-01-395-6099>

Reliability Indicator:

Not established

Indicator Type:

Dial w/pointer

Installation Design:

Panel

Power Source:

External

Measurement Range:

+0.0/+10.0 volts, dc single indicator single range

Scale Selection Method:

Terminal

Phase:

Single

Fsc Application Data:

Test set, elect. Equip.

Shelf Life:

N/a

Unit Of Measure:

--

Demilitarization:

No

Fig:

A310a0