

View Online at <https://aerobasegroup.com/nsn/6625-01-395-6099>

**Reliability Indicator:**

Not established

**Indicator Type:**

Dial w/pointer

**Installation Design:**

Panel

**Power Source:**

External

**Measurement Range:**

+0.0/+10.0 volts, dc single indicator single range

**Scale Selection Method:**

Terminal

**Phase:**

Single

**Fsc Application Data:**

Test set, elect. Equip.

**Shelf Life:**

N/a

**Unit Of Measure:**

--

**Demilitarization:**

No

**Fig:**

A310a0