

View Online at <https://aerobasegroup.com/nsn/6665-00-163-3061>

**Voltage In Volts And Current Type:**

115.0 ac

**Special Features:**

Use only when tester placed on floor; includes power cord; use only with ac socket; ten minute warm up time; includes color coded meter which measures resistance of shoes in ohms and indicates whether resistance is satisfactory; resistance reading in 0 to 1, 000, 000 ohms in green part of scale of meter considered safe; red area readings are unsafe; shoe tester should be disconnected from power outlet when not in use for long periods

**Functional Description:**

Test conductivity of shoes

**General Description:**

Shoe tester; keep clean and dry; foot plates may be cleaned with a damp cloth or polished w/steel wool or fine sandpaper; calibration of meter should be checked regularly; adjustment screw located beside the red button

**Shelf Life:**

N/a

**Unit Of Measure:**

--

**Demilitarization:**

No