Missile Subs Maintenance Trainer - Page 1 of 1



View Online at https://aerobasegroup.com/nsn/6920-01-295-2647

General Description:

Operational power requirements, 120/208 vac 60hz, phase 3; type of installation, permanent, outdoor at fewafb; item is used to train maintenance of all equipment found in a peacekeeper launch facility under instructor control and monitor; all operational, simulated and trainer unique equipment is contained in an underground facility similar to an operational launch facility with additional access and classroom **Shelf Life:**

N/a

Unit Of Measure:

Demilitarization:

Yes - demil/mli