

View Online at <https://aerobasegroup.com/nsn/7690-01-077-7283>

**Width:**

4.845 inches

**Length:**

2.470 inches

**Basic Shape Style:**

Rectangular

**Usage Form:**

Singular

**Marking Designation:**

Legend

**Inscription:**

Partial legend transmission operating instructions start place shift lever in neutral (n) to start engine. Build up air pressure to 80 psi

**Special Features:**

Remainder of legeng. Operation depress air control valve. Place shift lever in correct position to start load. 120, 000 lb. Gvw - 1st gear 75, 000 lb. Gvw - 4th gear progressive shifting recommended. Keep engine speed above 1100 rpm. Use shift inhibitor release for downshifting when vehicle is stopped. Park place transmission in neutral (n). Apply vehicle parking brake. Transmission will not serve as brake. Caution do not operate in 775-1100 rpm range for prolonged period. Downshifting more than 2 steps when vehicle is moving may overspeed engine. Do not slip transmission to hold vehicle stopped on grade.

**Color:**

White inscription background

**Shelf Life:**

N/a

**Unit Of Measure:**

--

**Demilitarization:**

No

**Fiig:**

A529m0